



INSTALLATION INSTRUCTIONS:

1. **WARNING:** Turn off main power to electrical outlet before installing safety device.
2. **WARNING:** Do not use with two prong ungrounded outlets.
3. **Remove existing wall plate.**
4. **Determine type of outlet.** Standard wall outlet has (one) screw hole (in the center) of the safety device. Standard Light Switch and Decora/Modern light switch and wall outlet has (two) screw holes (at top and bottom) of the safety device.
5. **Place safety device cover over outlet.** Ensure that the safety device is installed correctly over the wall outlet and/or light switch and are flush with each other. **Properly tighten screw(s).**

⚠ WARNING: RISK OF FIRE OR ELECTRIC SHOCK. If the child safety device falls out of or fits very loosely in the wall outlet or light switch, the wall outlet or light switch may be worn or broken. To reduce risk of fire, electric shock or injury caused by overheating, arcing or exposure of live plug blades, do not place the safety device over the wall outlet or light switch until it has been examined by a licensed electrician to determine whether the outlet or light switch needs to be replaced.

⚠ WARNING: This child safety device is intended to make it more difficult for children to gain access to electrical wall outlets and light switches. Like any other child deterrent product, this child safety device is **NOT** a substitute for adult supervision. An unsupervised child may be able to defeat this product. As with all electrical safety products, precautions should be observed during use and handling to prevent electric shock. Discourage children from playing with electrical equipment. **ADULT INSTALLATION REQUIRED.**

⚠ CAUTION: This product is only a deterrent. It is **NOT** a substitute for proper adult supervision. **DO NOT** use this product if damaged or broken. These products are **NOT** toys. **DO NOT** allow children to play with them. **FOR INDOOR USE ONLY.** Units are **NOT** paintable. If not completely satisfied, we will replace this product free of charge.

⚠ IMPORTANT SAFETY INFORMATION: Your child will eventually be able to defeat this child safety product. Discontinue use when your child becomes old enough to defeat it. Check for security after installation. To keep this product effective for as long as possible, avoid letting children see how you operate the safety device. Watching you disengage the safety device's three locks (to open the cover) could enable them to learn sooner how to defeat it. For best performance, ensure that your electrical wall outlet or light switch and child safety device are installed correctly and are flush with each other.